

How to Apply REVLAR Floor Decals

Print your own floor graphics. Apply with ease.

This two part floor graphic kit includes:

- Blank white 3 mil (248 gsm) printable synthetic floor label (base label)
- Clear non-slip overlamine sheet (top label)

For best results


- Always apply the floor decals to a clean, dry and smooth surface
- We recommend storing the decals in their original packaging until you print on them

Instructions for use:

1. Download your template ([circle](#), [oval](#), [rectangle](#)) and use it to design your floor graphic message
2. Print your floor graphic on the white base label
 - Compatible with laser, offset and UV inkjet printers
 - Liner is 4.6 mil + label is 3 mil = total for printing is 7.6 mil
3. Apply the printed white base label to the floor
 - Label will adhere to various smooth surfaces, such as vinyl, wood, synthetic wood, carpet, ceramic tile or concrete
4. Apply the clear overlamine on top of the printed base label

The non-slip overlamine has a permanent adhesive to ensure that it will not come off the base label. To make placement easier and to avoid bubbling, follow these tips during step #4 (above):

- Peel overlamine off its liner
 - Spray a liberal amount of mild soapy water on the adhesive side
- Apply to the top (non-adhesive side) of the printed white label
 - Use the notches as a guide for centering - align the clear overlamine with the inside of each notch on your base label
- Squeegee out the soapy water
- Wipe dry

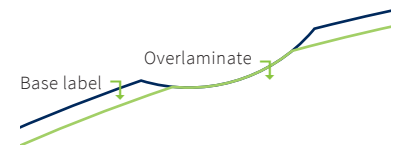

You'll notice that the clear overlamine is slightly smaller than the removable base label. This allows the entire piece to be cleanly removed from the floor, if needed. The two layers will always stay together.

